

SERVICE

- Maintenance plans (2.500 km & 10.000 km)
- Description of the work processes & their work values
- List of spare & wear parts and screws
- Tool list (recommended) for workshops
- [User manual](#) Mubea Cargobike

[illegible]

Our Maintenance Overview

Maintenance	Intervall	Responsibility
Visual & functional vehicle inspection, wear part replacement: brake pads	every 2,500 km or at least every 12 months	Service partner 
Visual & functional vehicle inspection, wear part replacement: brake pads, brake discs, transmission oil and tires. Chain set and sprockets as needed.	every 10,000 km or at least every 36 months	Service partner 

Acceptance maintenance at

2,500 km: 16,5 work values* $\triangleq$ 99 minutes (1,65 hours)

10,000 km: 29,5 work values* $\triangleq$ 177 minutes (2,95 hours)

Top 5 spared & weared parts:

- Brake discs
- Brake pads
- Tires
- Mirrors
- Saddle & Saddle Grips

* 1 WV = 6 min. (Current working values are based on the pilot vehicles).